

## Dent Puller Kit



**Safety First. Be Protected.**

### Guarantee

This item contains consumable elements that are **NOT** covered by the Tool Connection Guarantee. For spares contact our service department direct on: +44 (0) 1926 818186.

[www.power-tec.co.uk](http://www.power-tec.co.uk)



Distributed by The Tool Connection Ltd

Kineton Road, Southam, Warwickshire CV47 0DR  
T +44 (0) 1926 815000 F +44 (0) 1926 815888  
info@toolconnection.co.uk [www.toolconnection.co.uk](http://www.toolconnection.co.uk)




[www.power-tec.co.uk](http://www.power-tec.co.uk)

## Dent Puller Kit

Glue pulling is an ideal repair process when there is restricted access behind the dent to be repaired, and when used with care the paintwork will not be damaged.

The 92407 Dent Puller Kit is ideal for reducing small dents and dings. It is supplied with 10 assorted glue pads, including circular and split elliptical pads suitable for a variety of different dent shapes and sizes.


The glue pads are designed to grip the glue and pull in different ways. A split pad initially pulls strongly across the dent. Then the pad deforms as the metal moves out and the pad is pulling more from the centre. (See diagram.)

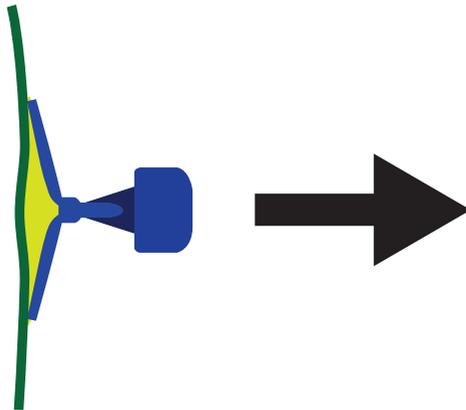


Recommended products:  
 Gluematic Glue Gun (**Part No. 91237**)  
 Glue Sticks – Pack of 15 (**Part No. 92342**)  
 Solvent Spray for Hot Melt Glue (**Part No. 92341**)

## Instructions

1. Clean the area around the dent to be repaired with a solvent degreaser / release spray. This ensures the hot glue will stick to the panel.
2. Choose a glue pad of the correct size and shape.
3. Apply the hot glue to the pad and place in the centre of the dent.

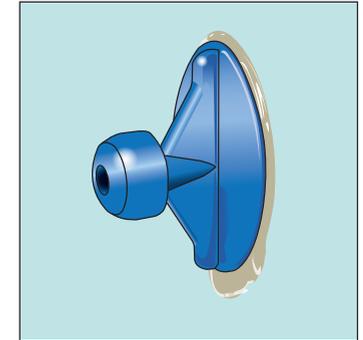

4. Before continuing, check that the glue has cooled and set.
5. Position the puller over the glue pad, sliding the puller grip over the head of the pad
6. Tighten the red control knob in a clockwise direction to steadily pull out the dent.

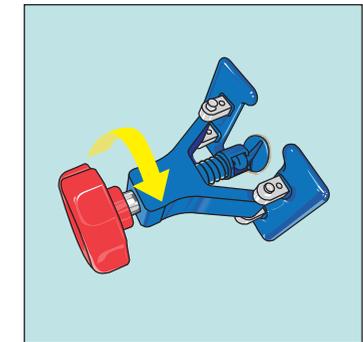

7. As the metalwork straightens and returns to its former position the tension will cause the glue seal between the pad and the panel to break.
8. Now the solvent cleaner is applied again to soften the glue and it is easily removed with a soft plastic scraper. Clean off any remaining traces of glue with the solvent.
9. A deeper dent may need two or three applications of the glue pad.