

Weld and Slide Dent Puller

This combined slide hammer and resistance welder cuts down on both repair time and consumables as it welds the tip directly onto the panel being repaired. Once attached, pull back on the welder which acts as a slide hammer pulling out the dent, then turn it 90 degrees to break the weld.



Additional Information

- Lightweight slide hammer and resistance welder combined in one unit.
- Simply weld to the panel then use the internal slide hammer to pull the dent out.
- Twist 90 degrees to break weld.
- Earth electrode housed in the same unit.
- Replacement parts available, Part Nos. 91001 (copper welding tip) and 91000 (copper earth).

<http://powertec.co.uk/product/92436>

Video available: <https://youtu.be/Zw4JU2u76kQ>

